

Model:UT-890A-I
USB

.....	3
.....	3
.....	4
.....	4
.....	5
.....	6
.....	7
.....	7
.....	8-13

UT-890A-I

USB/RS-485/422

USB

USB/DB-9

/

RS-485

RS-422

% DB9

RS-485/RS-422

DB9 (PIN)		RS-422	RS-485
1	T/R+	(A+)	RS-485(A+)
2	T/R-	(B-)	RS-485(B-)
3	RXD+	(A+)	

[Redacted]

[Redacted]

[Redacted]

[Redacted]



[Redacted]

[Redacted]

[Redacted]



[Redacted]

[Redacted]

1

A USB

B RS-485/RS-422

C


D

E

F

2

A

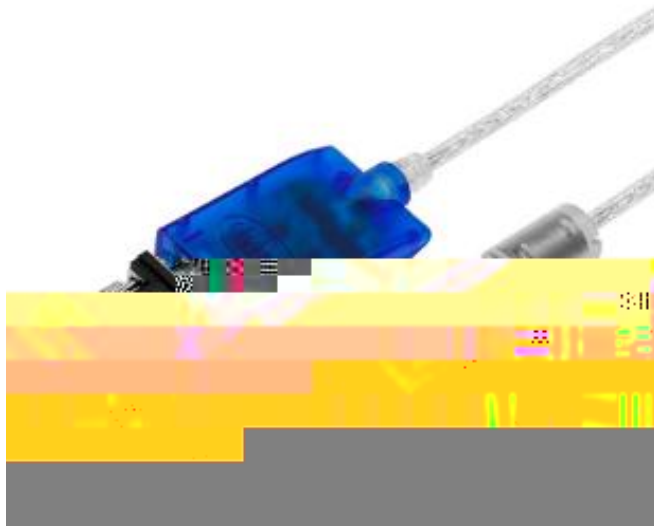

UT-890A-I

XP

[


()]

[

[

[]

software

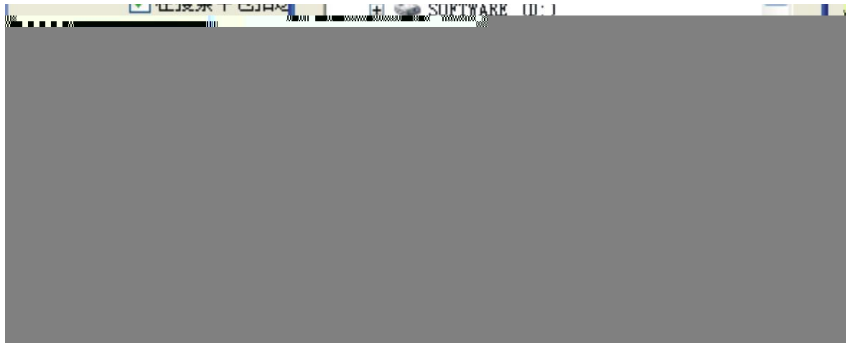


windows xp

[USB2.0 Driver

win2000 xp64 server2003

2008x64 Vista x64 win7 x64]



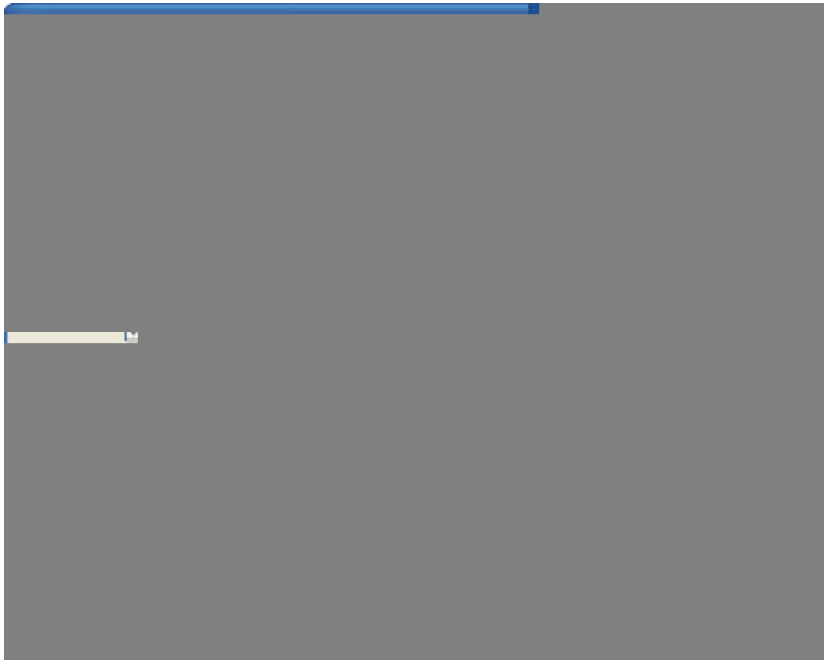




USB Serial Port

USB Serial Converter

[



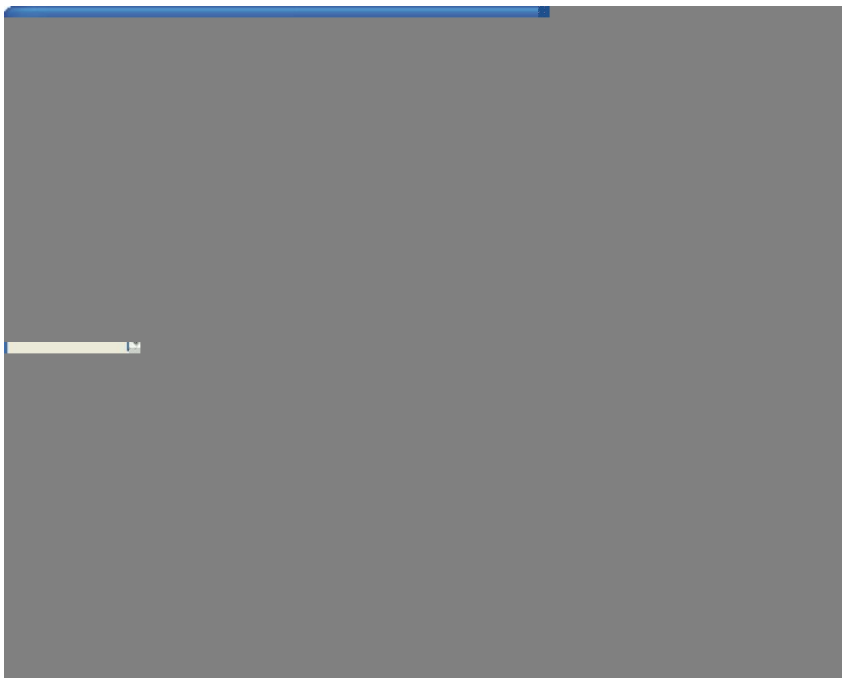


USB Serial Port



USB Serial Port

UT-890A-I

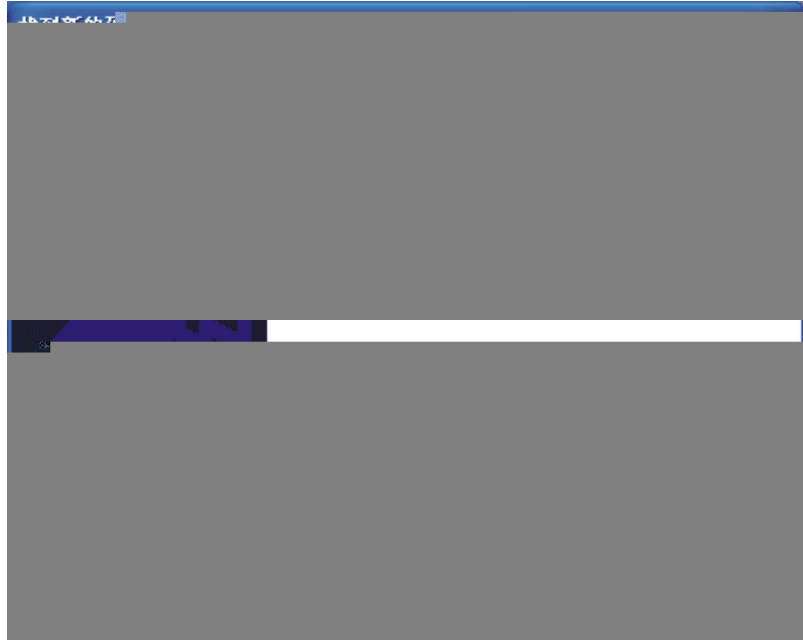

USB

COM

COM3

COM

UT-890A-I